


# QUICK START INSTRUCTIONS

For your *Berner Air Curtain with Intelliswitch™ Gen4*

[www.Berner.com/intelliswitch](http://www.Berner.com/intelliswitch)

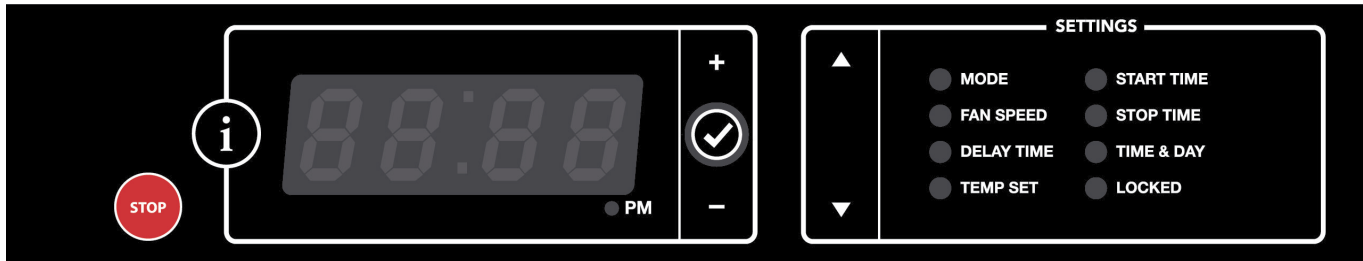

**NOTE** – to navigate, use ▲ ▼ to select setting  
use + – to change setting,  
then press ✓ to enter the setting.

**Stop:** Immediately stops the air curtain and changes mode to **OFF**

**"i":** info button provides controller status and diagnostic data

## Mode/Fan Speed:

**Mode:** Select your mode of operation (see next page)

**Fan Speed:** Sets the fan speed

**Delay Time:** Sets the amount of time the air curtain runs after the door closes

**Temp Set:** Sets the temperature the air curtain will maintain (heated units only)

**Start Time:** Programs the time of day the air curtain becomes active

**Stop Time:** Programs the time of day the air curtain stops running

**Set Time/Day:** Sets the clock time and day (used by programming)

**Locked:** Unit will run as programmed but settings cannot be changed

## IMPORTANT NOTE!

If your air curtain unit is in "Locked" mode when you receive it:

Press and hold the + for 5 seconds to unlock.

## STEP ONE





**To Start:** Press the down arrow button once.

*NOTE: To change from "Mode" to "Fan Speed" press the down arrow twice.*

## STEP TWO



Use the   buttons to scroll through the available modes of operations.



### ***Standard Mode of Operation Options:***

**OFF**

**Door opens:** The air curtain is off.

**Door shuts:** The air curtain is off.

**ON**

**Door opens:** The air curtain activates immediately when mode is selected.

**Door shuts:** The air curtain continues to run.

**AUTO**

**Door opens:** The air curtain activates.

**Door shuts:** The air curtain turns off, after time delay expires.

**PLUS**

*For heated units only*

**Door opens:** The air curtain and heater (if temperature is below thermostat setting) activate and run at set speed.

**Door shuts:** The air curtain turns off after the time delay expires. If thermostat is not satisfied, air curtain and heater continue to run until the thermostat is satisfied. If the thermostat drops below set temperature, the heater and air curtain will activate and run on a low speed until the thermostat is satisfied.


### ***Customizable Mode of Operation Options:***

See [www.berner.com/intelliswitch](http://www.berner.com/intelliswitch) for programming directions

*(Section 5, Program Menu).*

## STEP THREE



Once the **Mode of Operation** is selected, press the  button.