



QUICK START INSTRUCTIONS

For your Berner Air Curtain with Intelliswitch™

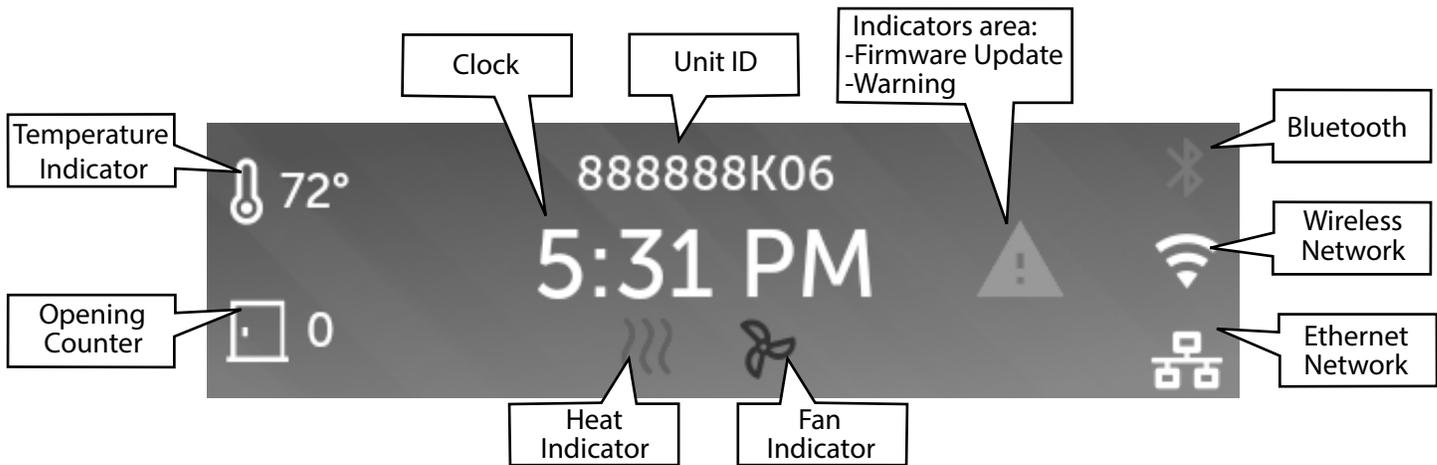


HOME SCREEN

To reach the "HOME" Screen, touch the screen with your finger.

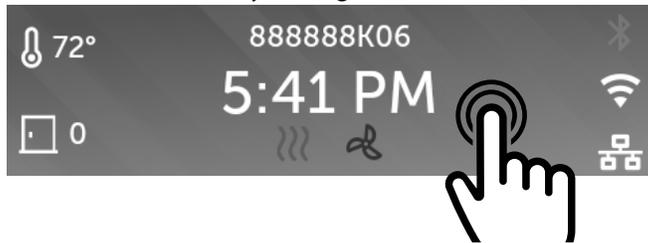

To access to the different panels, touch the related icon. Each panel can control a specific parameter of the air curtain.

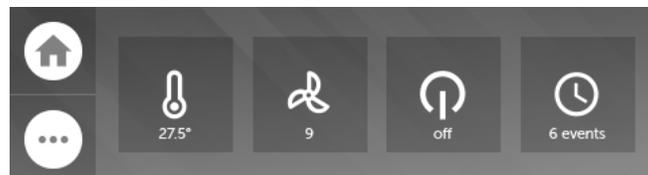

- Button to return to the "HOME" screen.
- Button to access the advanced parameters.
- Button to access the temperature settings. *(This button is only available if your unit is heated.)*
- Button to access the fan speed settings.
- Button to access the mode settings.
- Button to access the Schedule. *(See Events Configuration)*
- Button to return to the previous panel.

FAN SPEED SETTINGS

You can adjust your settings by press the "+" or the "-" icons.



TEMPERATURE SETTING


You can adjust your settings by press the "+" or the "-" icons.



NOTE: The temperature value at the right corner indicates the ambient temperature around the air curtain sensor.



MODE SETTINGS

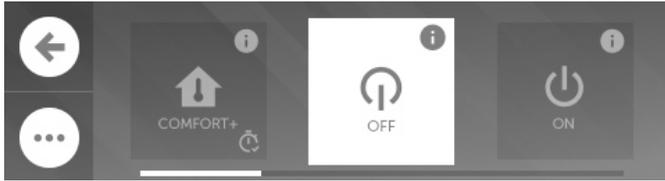

Different modes are available:



COMFORT +

The air curtain and heater turn on when the door opens or the room temperature drops below the set temperature. The air curtain turns off when the door is closed, the time delay has expired, and the room temperature is above the set temperature.



AUTO

The air curtain turns on when the door opens and turns off when both the door closes and the time delay expires.



ON

The air curtain turns on when scheduled events are satisfied. If no events have been scheduled, the air curtain turns on.




OFF

The air curtain is off.

EVENTS CONFIGURATION

The *Intelliswitch™* is able to configure a schedule to automatically activate your air curtain. To do this, you need to activate the option, by executing the followings instructions:

1. On the "HOME" screen, push the button.
2. Select the button.
3. To reach the "SCHEDULE" option, by pushing the options on the top on each side of the screen.
4. To activate the schedule, just press the icon.
5. Return to the "HOME" screen by using the button.
6. On the "HOME" screen, press the tile.
7. For your first event, press the following tile.

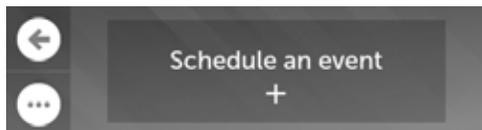


8. On the schedule panel, select the desired parameters among the following's options:



NOTE: You can use the button to cancel your action.

9. Use the button to save your settings.

10. After the settings of your first event, it appears as shown:

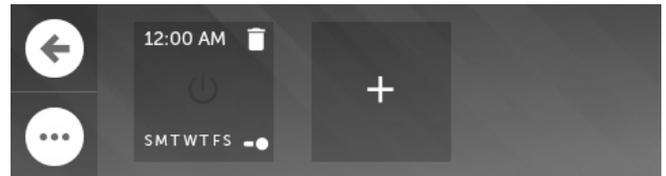

NOTE: You can deactivate an event by using the slider at the bottom right of the desired event. Alternatively, if you want to suppress the event, push the button.


11. Press the tile to add another event.

NOTE: The schedule is fully operational with at least, 2 events.

CLOCK CONFIGURATION

If the *Intelliswitch™* is connected to internet, the date and time will be automatically synchronized. Otherwise you can manually configure them, by following the instructions below:

1. On the "HOME" screen, push the button.
2. Select the "clock parameters" button.
3. Select the "Time" button.

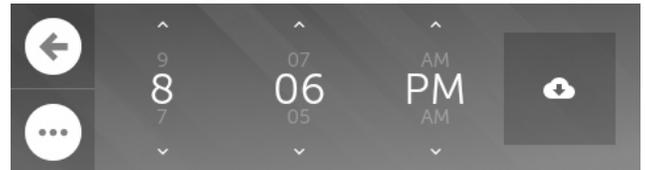

4. Set the time by using the arrows on the screen then push the button to save.

5. To change the date, repeat the same operations but on steps 3, select the button.

NOTE: Changing the date or time manually, will disable the automatic time synchronization if your unit is connected to internet.

NOTE: The time zone affects the automatic synchronization, be sure your time zone is correctly selected (See Time Zone Configuration)

TIME ZONE CONFIGURATION

To change your timezone, follow these instructions:

1. On the "Home" screen, push the button.
2. Select the button.
3. Select the "clock parameters" button.
4. Select the "TimeZone" button.
5. Select successively the options "Continent" → "Country" → "City". →
6. Once you finish your selection, press the button to save the time zone.

NOTE: If the date and time is automatically synchronized with the internet, it's mandatory to set the timezone correctly. If not connected, the appropriate timezone setting will help following the daylight-saving time (DST) changes.



Press the adjacent tiles on other sides to navigate through the menu.